


SC6000-III

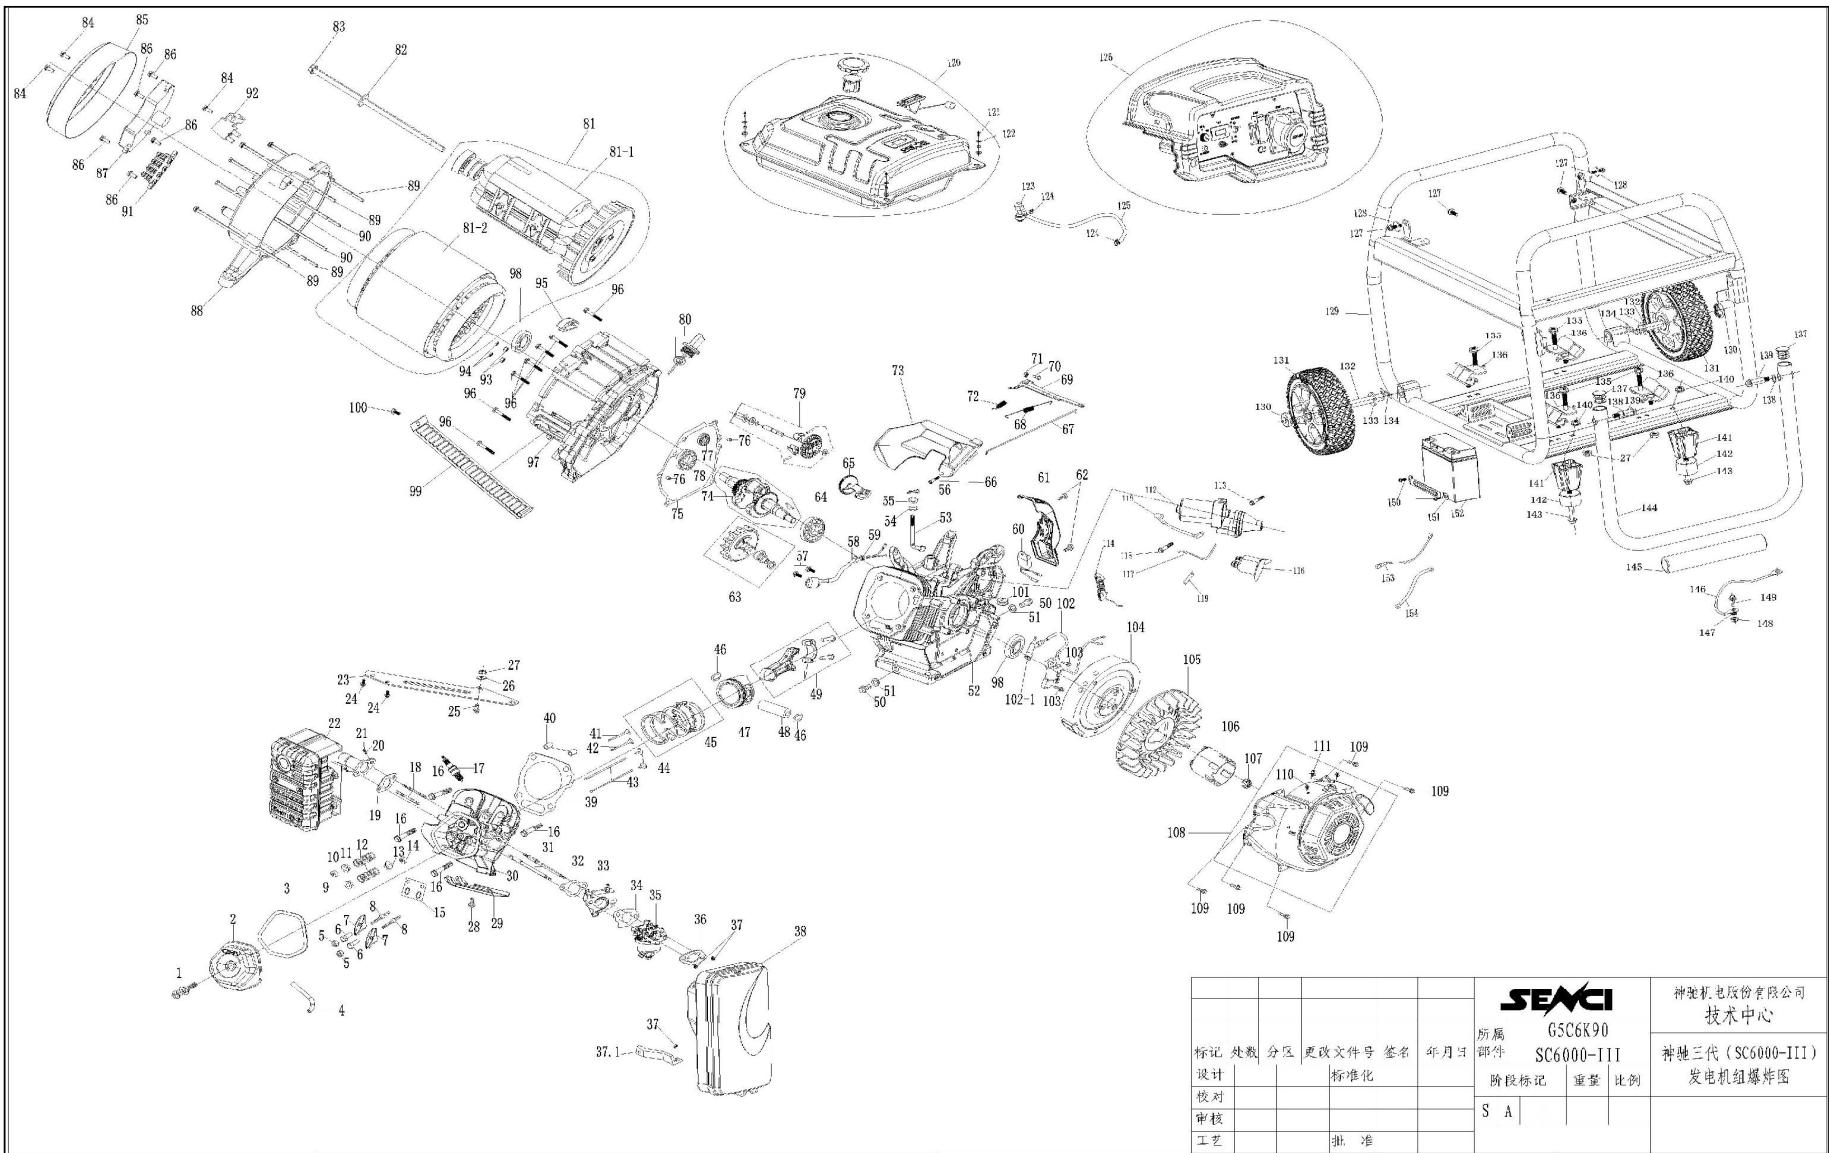

				SEACI		神驰机电股份有限公司	
				G5C6K90		技术中心	
				SC6000-III		神驰三代 (SC6000-III)	
				阶段标记		重整 比例	
				S A		发电机组爆炸图	
				工艺		批准	

Item	Codigo	Descripción	Cantidad
1	12020-E88F-0000	Flange bolt	1
2	12500-E88F-100C	cylinder head assy	1
3	12002-E88F-0000	gasket, cylinder cap	1
4	14201-E88F-2000	exhaust pipe	1
5	14434-E88F-0000	adjusting nut, rocker arm	2
6	14432-E88F-0000	rocker arm	2
7	14431-E88F-0000	valve rocker arm	2
8	14433-E88F-0000	rocker shaft bolt	2
9	14445-E88F-0000	spring seat, intake valve	1
10	14447-E88F-0000	rotor,exhaust valve	1
11	14446-E88F-0000	spring seat, exhaust valve	1
12	14751-E88F-0000	valve spring	2
13	14448-E88F-0000	spring bottom seat, exhaust valve	1
14	14444-E88F-B000	oil seal, intake valve	1
15	14449-E88F-0000	plate guide, push rod	1
16	B5789-10LJ-080C	flange bolt	4
17	15010-E88F-1000	spark plug	1
18	12005-E68F-000C	stud bolt, exhaust	2
19	18010-E88F-0000	gasket, muffler	1
20	B895-085G-000B	spring washer	2
21	B6170-0800-000B	hex nut	2
22	53100-G7A1-20B3	muffler components	1
23	53217-G5AA-000C	support, muffler	1
24	B5789-06KG-012B	flange bolt	2
25	B5787-08LG-040B	flange bolt	1
26	B97.4-080G-000B	plain washer	1
27	B6177.1-08KG-000B	flange nut	7
28	B5789-06KG-012C	flange bolt	1
29	11016-E88F-0000	wind shield	1
30	12200-E88F-0000	cylinder head assy	1
31	12004-E88F-001C	stud bolt, inlet	2
32	17005-E88F-1000	gasket, inlet	1
33	17001-E88F-0100	carburator connecting block	1
34	17003-E88F-0100	gasket, carburator	1
35	17200-E88F-1004	carburator assy	1
36	17004-E88F-1000	gasket,air cleaner	1
37	B6177.1-06KG-000C	flange bolt	3

37,1	51213-G5A3-0000	air cleaner bracket	1
38	14200-E90F-3200	air cleaner assy	1
39	12010-E88F-0000	gasket,cylinder head	1
40	11014-E88F-0000	dowel pin	2
41	14443-E88F-0000	exhaust valve	1
42	14442-E88F-0000	intake valve	1
43	14410-E88F-0000	push rod,valve	2
44	14441-E88F-0000	valve tappet	2
45	13010-E88F-0000	piston ring components	1
46	13112-E88F-0000	clamp,piston pin	2
47	13101-E88F-0000	piston	1
48	13111-E88F-0000	piston pin	1
49	13200-E88F-0000	connecting rod assy	1
50	B5789-12LG-016C	drain bolt	2
51	B848-120H-0000	aluminum washer	2
52	11100-E88E-2000	crankcase	1
53	16001-E88F-1000	swing bar,adjust	1
54	B95-080G-000B	washer,swing bar	1
55	B13871-0814-A000	oil seal,swing bar	1
56	16006-E88F-0000	clamp,dowel pin	1
57	B5787-06KG-016C	flange bolt	2
58	15020-E88F-0100	oil alert	1
59	B6117.1-10LG-000A	nut	
60	15030-E68F-1000	oil alert	1
61	55017-G5C6-0000	Block wire cover	1
62	B5789-06KG-012C	flange bolt	2
63	14100-E88F-0001	camshaft assy	1
64	B275-6202-01	bearing	1
65	13401-E90F-0000	balance shaft	1
66	B5789-06KG-012C	flange bolt	3
67	16002-E88F-0000	Connecting rod, speed adjusting	1
68	16003-E88F-0000	fine-tuning spring	1
69	16020-E88F-0000	Arm, speed adjusting	1
70	16031-E68F-000C	bolt,speed adjusting arm	1
71	B6177.1-06KG-000C	flange nut	1
72	16004-E88F-0000	reset spring	1
73	16300-E88F-0000	speed controller assy	1
74	13300-E88F-A000	crankshaft assy	1

75	11012-E88F-1000	gasket,crankcase cover	1
76	11014-E68F-0000	dowel pin	2
77	B275-6207-00	bearing	1
78	B275-6202-01	bearing	1
79	16010-E88F-0000	speed control gear assy	1
80	11010-E88F-0000	oil level gauge	1
81	20029-02982-00	alternator components	1
81-1	31200-B148-0005	rotor	1
81-2	31100-B154-0017	stator	1
82	B97.4-105G-000C	plain washer	1
83	B5789-10LG-265C	flange bolt	1
84	B5787-05JG-012B	flange bolt	3
85	31301-G6A1-00B4	alternator end cover	1
86	B5787-05JG-016B	flange bolt	5
87	31700-G5A4-0000	AVR	1
88	31502-G5A3-0000	alternator support	1
89	B5789-06KG-175C	flange bolt	4
90	B5787-05KG-215B	hexagon bolt	2
91	31401-A120-0012	wiring board components	1
92	31610-B140-0002	carbon brush	1
93	B809-0500-000B	round nut	2
94	B93-050G-000B	spring washer	2
95	55005-G5A3-0000	dust-proof rubber	1
96	B5787-08LG-040C	flange bolt	7
97	11200-E88F-0300	crankcase cover assy	1
98	B9877.1-3552-A000	oil seal	2
99	55006-G5B8-0000	down windshield	1
100	B5787-05JG-012B	flange bolt	1
101	15002-E68F-0000	block rubber	1
102	15100-E90F-1000	ignition coil assy	1
102-1	15011-0188-0000	spark plug cap	1
103	B5789-06KG-025C	flange bolt	2
104	15300-E88E-0000	flywheel components	1
105	15004-E88F-0000	cooling fan	1
106	15003-E88F-0000	starting cup	1
107	B6177.1-16MG-001C	flange nut	1
108	15600-E88F-27RE	recoil starter assy	1
109	B5789-06KG-012C	flange bolt	5

110	11015-E88F-0000	wiring clamp	3
111	11015-E88F-0200	wiring clamp	1
112	34000-E88E-1000	starting motor assy	1
113	B5789-08LG-032C	flange bolt	2
114	15200-E88F-0000	charge coil	1
115	B5789-06KG-031C	flange bolt	2
116	34100-E88E-0000	starting relay	1
117	34101-E88F-0000	connecting wire	1
118	34102-E88E-0000	relay cap	1
119	15001-E88E-0000	pressure plate	1
120	54100-G5C6-00RE	fuel tank assy	1
121	B5789-06KG-025B	flange bolt	4
122	B5287-G7A2-000B	washer,fuel tank	4
123	54105-G5AA-0000	fuel tank switch	1
124	54106-G7A1-000K	hoop	1
125	17002-E68F-1000	fuel hose	0,42
126	52000-G5C6-08B4	control panel assy	1
127	B5789-06KG-020B	flange bolt	4
128	B5287-G7A2-000B	washer,fuel tank	2
129	51100-G5C6-04B4	frame components	1
130	51311-G5AA-0000	wheel hub cover	2
131	51310-G5AA-0000	wheel assy	2
132	51301-G5C6-0000	wheel axle	2
133	B95-016G-000B	plain washer	2
134	16006-G7A2-0000	clamp,location pin	2
135	B6177.1-10LG-000C	flange nut	2
136	51204-G5A3-A000	shock-absorbing seat A	4
137	51312-G5AA-1000	plastic plug,handle	2
138	55012-G5AA-0000	nylon washer	2
139	51229-G5AA-0000	fixing pin,handle	2
140	44008-0800-000B	nylon nut	2
141	51330-G5B8-00B4	support components	2
142	51304-G5AA-0000	rubber wahser,support	2
143	B5789-08LG-095B	flange bolt	2
144	51320-G5C6-00B4	handle pipe components	1
145	51306-G5AA-0000	handle pipe rubber cover	1
146	51219-G6A1-0000	ground wire	1
147	B861.2-060G-000B	spring washer,quincunx	1

148	B6177.1-06KG-000B	flange nut	1
149	B5789-06KG-012B	flange bolt	1
150	B5789-06KG-012B	flange bolt	2
151	51202-G5AA-00B4	fixing plate,battery	1
152	51270-12AH-2000	battery	1
153	51217-G6A3-340R	Positive battery charging cable	1
154	51217-G6A3-450B	Negative battery charging cable	1