



A 部分示意图

Part (A)

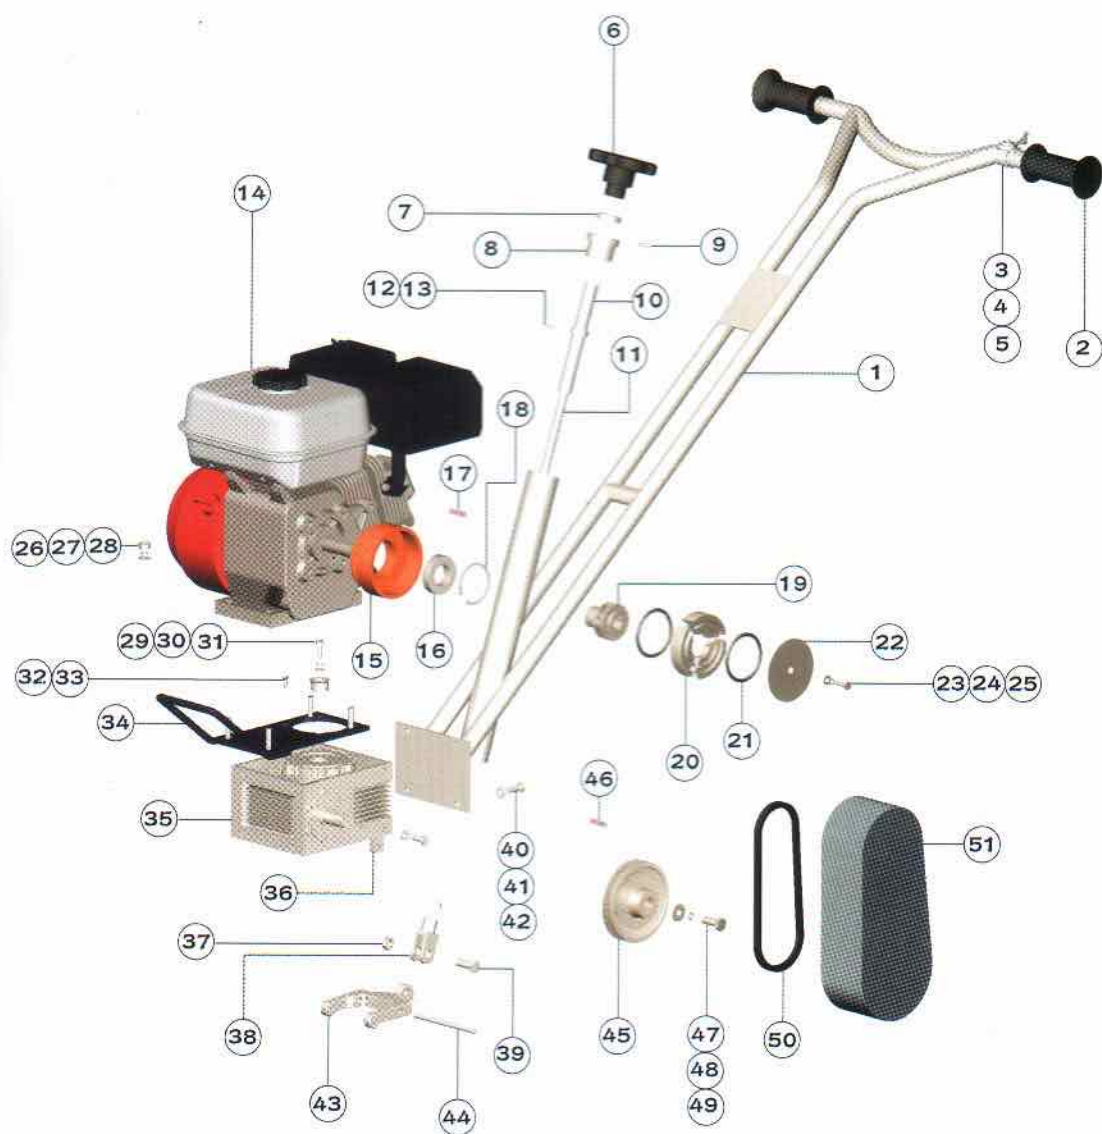

A 部分零件目录


Part List (A)

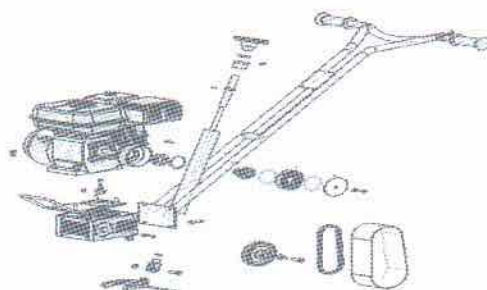

Ref序号	Part No.	Description	名 称	备 注
1	MB-A-001	Handle	把	1
2	MB-A-002	Handle Grib	把套	2
3	MB-A-003	Throttle Lever	油门开关	1
4	MB-A-004	Throttle Cable	油控线	1
5	MB-A-005	Throttle Cable Guard Pipe	油控线护管	1
6	MB-A-006	Hand Wheel	调节盘	1
7	MB-A-007	Thrust Bearing	推力轴承	1
8	MB-A-008	Bush	轴承套	1
9	MB-A-009	Slide Bolt	顶丝	1
10	MB-A-010	Blade Angle Adjustment Bar	调节杆套	1
11	MB-A-011	Adjustment Bar Connector	调节杆	1
12	MB-A-012	Collar	垫圈	1
13	MB-A-013	Cotter Pin	卡子	1
14	MB-A-014	Engine	发动机	1
15	MB-A-015	Clutch Drum	离合器毂	1
16	MB-A-016	Bearing	轴承	1
17	MB-A-017	Key	键	1
18	MB-A-018	Circlip	内卡	1
19	MB-A-019	Clutch Boss	离合器芯	1
20	MB-A-020	Clutch Shoe	离合器甩块	3
21	MB-A-021	Clutch Spring	离合器弹簧	2
22	MB-A-022	Clutch Guide	离合器挡盖	1
23	MB-A-023	Flat Washer	平垫	1
24	MB-A-024	Lock Washer	弹垫	1
25	MB-A-025	Bolt	螺栓	1
26	MB-A-026	Nut	螺母	4

A 部分零件目录


Part List (A)

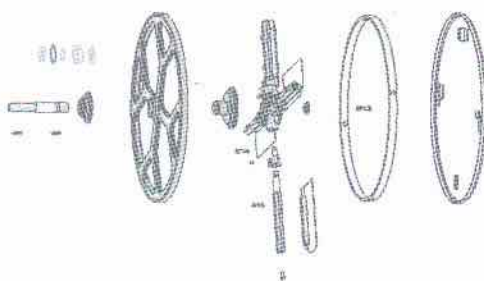

Ref序号	Part No.	Description	名 称	备 注
27	MB-A-027	Lock Washer	弹垫	4
28	MB-A-028	Flat Washer	平垫	4
29	MB-A-029	Bolt	螺栓	1
30	MB-A-030	Lock Washer	弹垫	1
31	MB-A-031	Flat Washer	平垫	1
32	MB-A-032	Bolt	螺栓	4
33	MB-A-033	Cap For Speed Reducer	减速机上盖	1
34	MB-A-034	Base Plate For Engine	发动机座	1
35	MB-A-035	Reducer Gear Box	减速机	1
36	MB-A-036	Lever Support	吊耳	2
37	MB-A-037	Nut	螺母	1
38	MB-A-038	Fork Head	连接头	1
39	MB-A-039	Bolt	螺栓	1
40	MB-A-040	Bolt	螺栓	4
41	MB-A-041	Lock Washer	弹垫	4
42	MB-A-042	Flat Washer	平垫	4
43	MB-A-043	Fork Lever	拨叉	1
44	MB-A-044	Fixation Pin	轴	1
45	MB-A-045	Pulley	皮带轮	1
46	MB-A-046	Key	键	1
47	MB-A-047	Bolt	螺栓	1
48	MB-A-048	Lock Washer	弹垫	1
49	MB-A-049	Flat Washer	平垫	1
50	MB-A-050	V-Belt	皮带	1
51	MB-A-051	Belt Cover	皮带罩	1

B 部分示意图

Part (B)

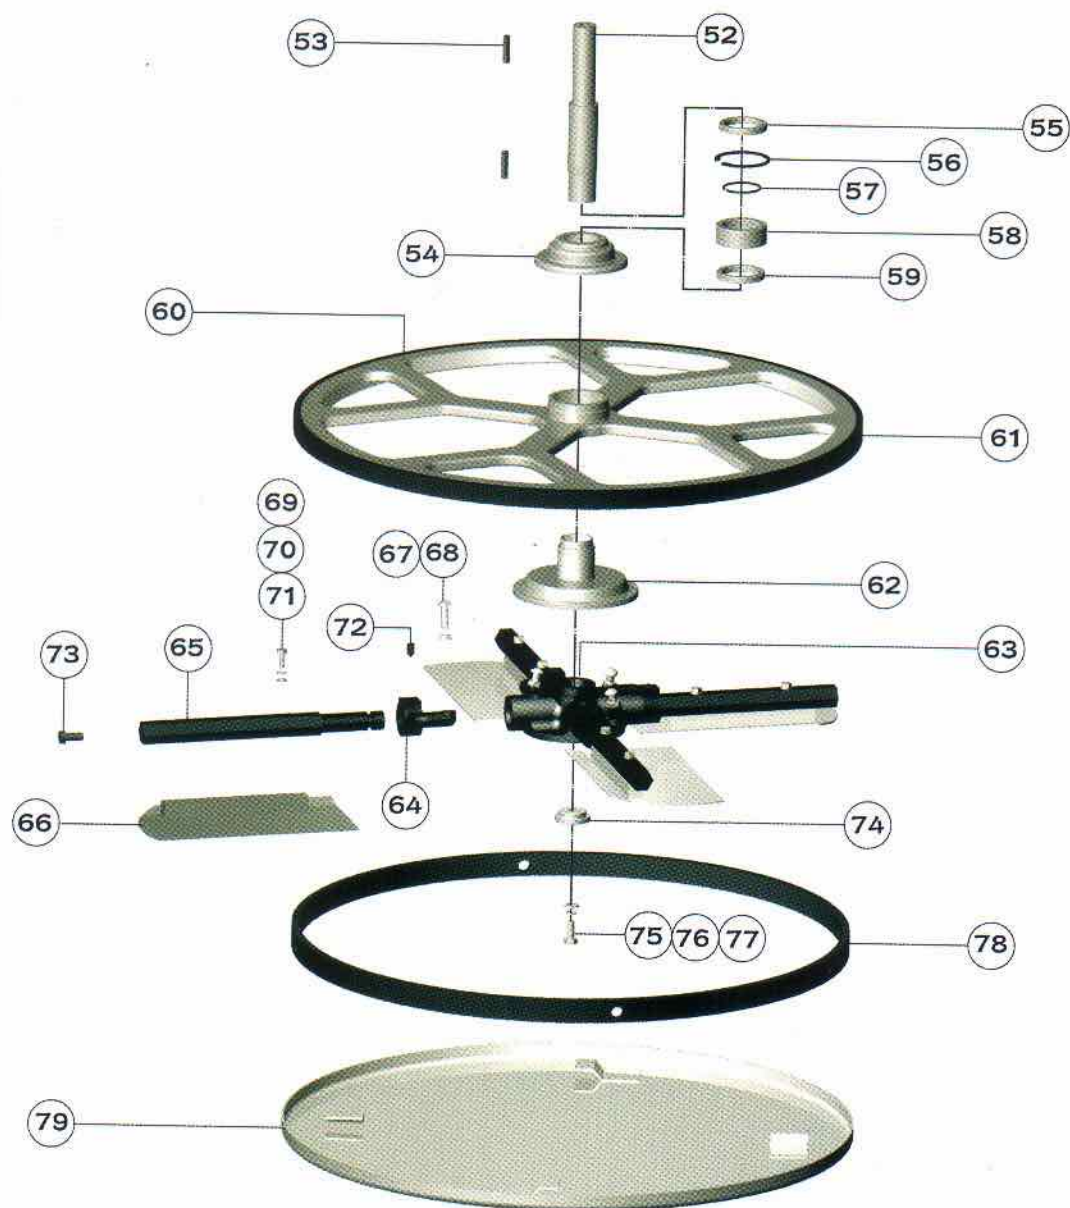

B 部分零件目录

Part List (B)

Ref序号	Part No.	Description	名 称	备 注
52	MB-B-052	Speed Reducer	减速机轴	1
53	MB-B-053	Key	键	2
54	MB-B-054	Pressure Cap For Thrust Bearing	轴承压盘	1
55	MB-B-055	Thrust Bearing	推力轴承	1
56	MB-B-056	Circlip	内卡	1
57	MB-B-057	Circlip	钢丝圈	1
58	MB-B-058	Bearing	滚针轴承	1
59	MB-B-059	Bearing	轴承	1
60	MB-B-060	Safety Ring Belt	护圈	1
61	MB-B-061	Safety Ring	橡胶圈	1
62	MB-B-062	Pressure Cap	调节压盘	1
63	MB-B-063	Blade Base	刀臂座	1
64	MB-B-064	Elbow Blade	轴套	4
65	MB-B-065	Arm Blade	刀臂	4
66	MB-B-066	Trowel Blade	刀片	4
67	MB-B-067	Bolt	螺栓	4
68	MB-B-068	Nut	螺母	4
69	MB-B-069	Bolt	螺栓	4
70	MB-B-070	Lock Washer	弹垫	4
71	MB-B-071	Flat Washer	平垫	4
72	MB-B-072	Slide Bolt	顶丝	4
73	MB-B-073	Bolt	螺栓	4
74	MB-B-074	Bottom Blade Base Cap	刀臂座底盖	1
75	MB-B-075	Bolt	螺栓	1
76	MB-B-076	Lock Washer	弹垫	1
77	MB-B-077	Flat Washer	平垫	1
78	MB-B-078	Cover Ring	刀片护圈	1
79	MB-B-079	Blade Base Cover	大盘	1