



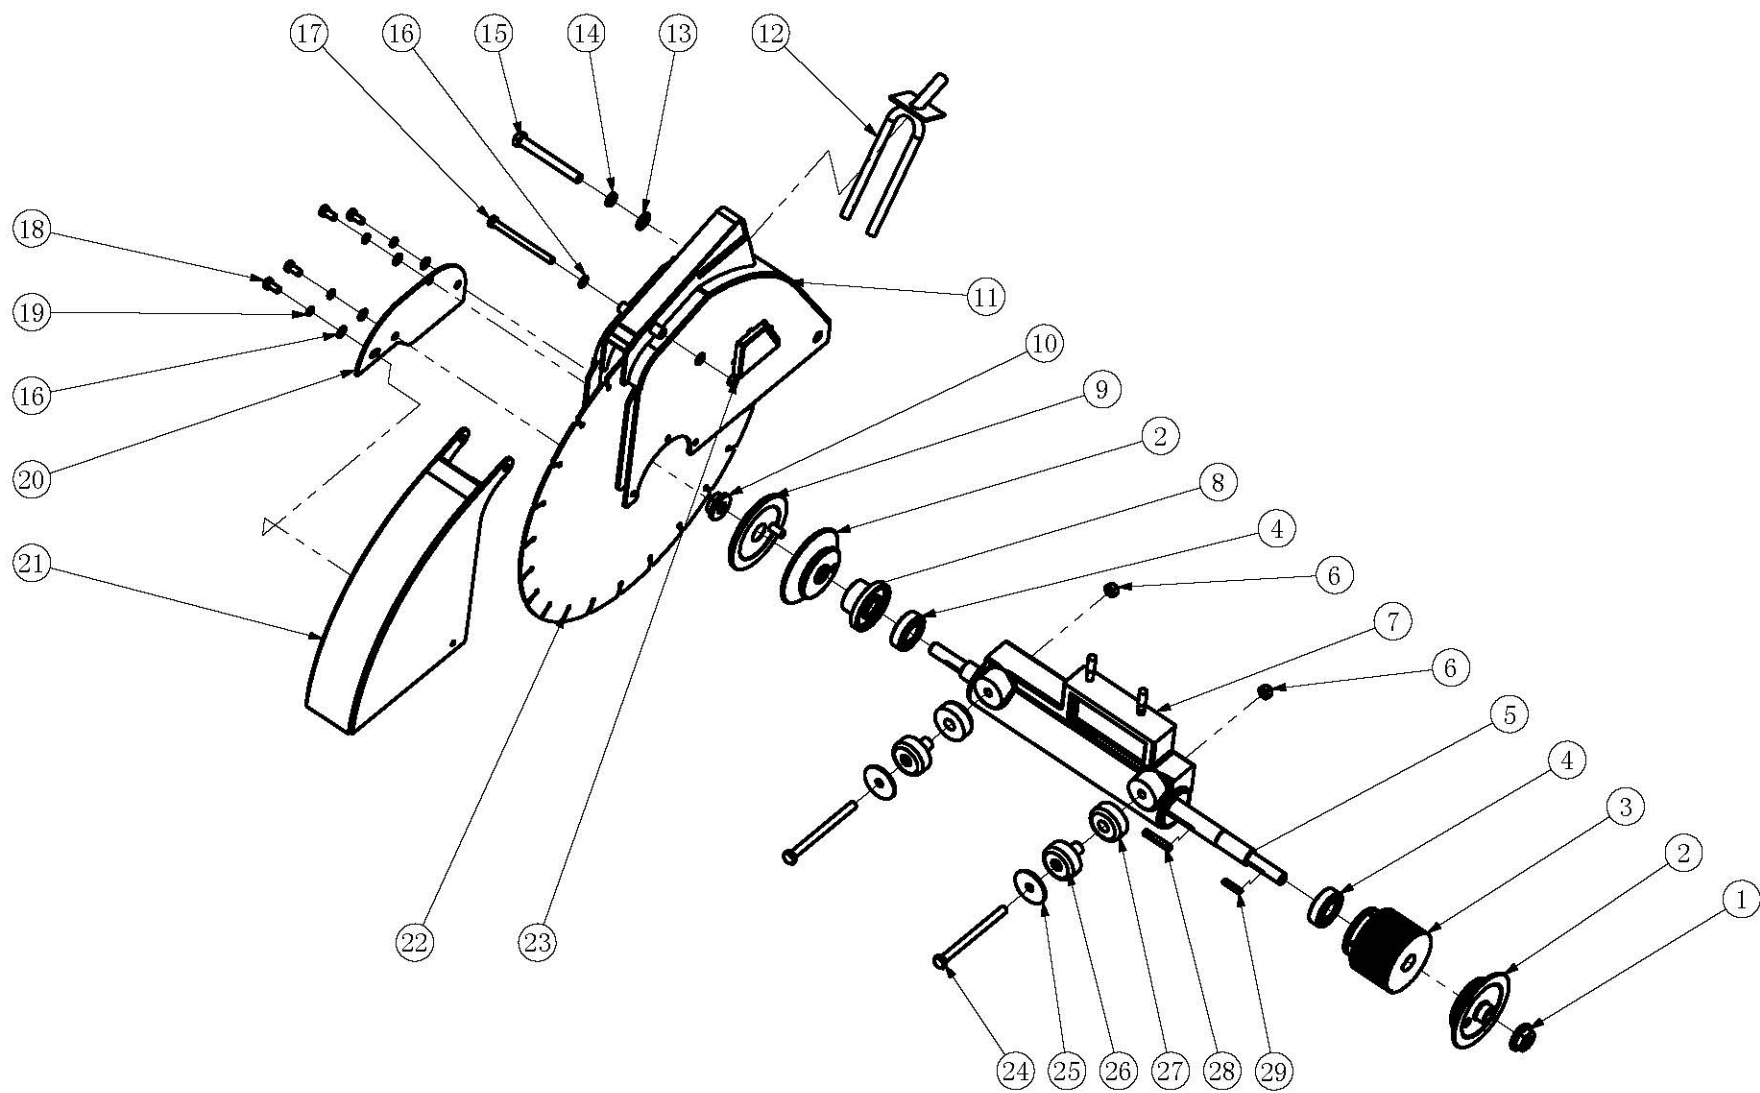

BLADE GUIDE & WATER SYSTEM

Item	名称	Description	Part No.	QTY	Remark
1	六角面法兰螺母（左旋）	FLANGE NUT (LEV)	0905-03006-1	1	M16
2	锯片卡板（内）	FLANGE	0905-03003-1	2	
3	锯片传动轴皮带轮	BLADESHAFT PULLEY	0905-03002-1	1	
4	深沟球轴承	BEARING 6205	136025	2	6205
5	锯片传动轴	BLADESHAFT	0905-03001-1	1	
6	防松螺母	NYLON NUT M10	4100001	2	M10
7	锯片轴轴承座组件	BLADESHAFT TUBE MACHINING	0905-03100-1	1	
8	锯片轴轴承座封套	SLINGER. BLACK OXIDE	0905-03004-1	1	
9	锯片卡板外组件	PLAIN FLANGE	0905-03200-1	1	
10	六角法兰螺母（右旋）	FLANGE NUT (DEX)	0905-03005-1	1	M16
11	后锯片罩	BLADE GUARD REAR	0905-01100-3	1	
12	水管焊接组件	WATER PIPE KIT	0905-13000-1	1	
13	平垫	WASHER M12	1120000	1	M12
14	弹垫	SW M12	2120000	1	M12
15	螺栓	BOLT M12X100X25	31210025	1	M12X100X25
16	平垫	WASHER M8	1080000	6	M8
17	螺栓	BOLT M8X100X25	30810025	1	M8X100X25
18	螺栓	BOLT M8X16	3081600	4	M8X16
19	弹垫	SW M8	2080000	4	M8
20	锯片罩连板2	BLADE GUARD CONNECTOR	0905-01001-2	1	
21	前锯片罩	BLADE GUARD FRONT	0905-01200-3	1	
22	20寸锯片	SAW DISC	16140000	1	
23	防松螺母	NYLON NUT M8	4080001	1	M8
24	螺栓	BOLT M10X130X35	31013035	2	M10X130X35
25	大平垫	WASHER	1115003	2	Φ11X50X3
26	减震块（后）内	SHOCK ABSORBER (IN)	0905-00001-1	2	
27	减震块（后）外	SHOCK ABSORBER (OUT)	0905-00014-1	2	
28	圆头平键	KEY 6X45	12060645A	1	6X45
29	圆头平键	KEY 5X30	12050530A	1	5X30

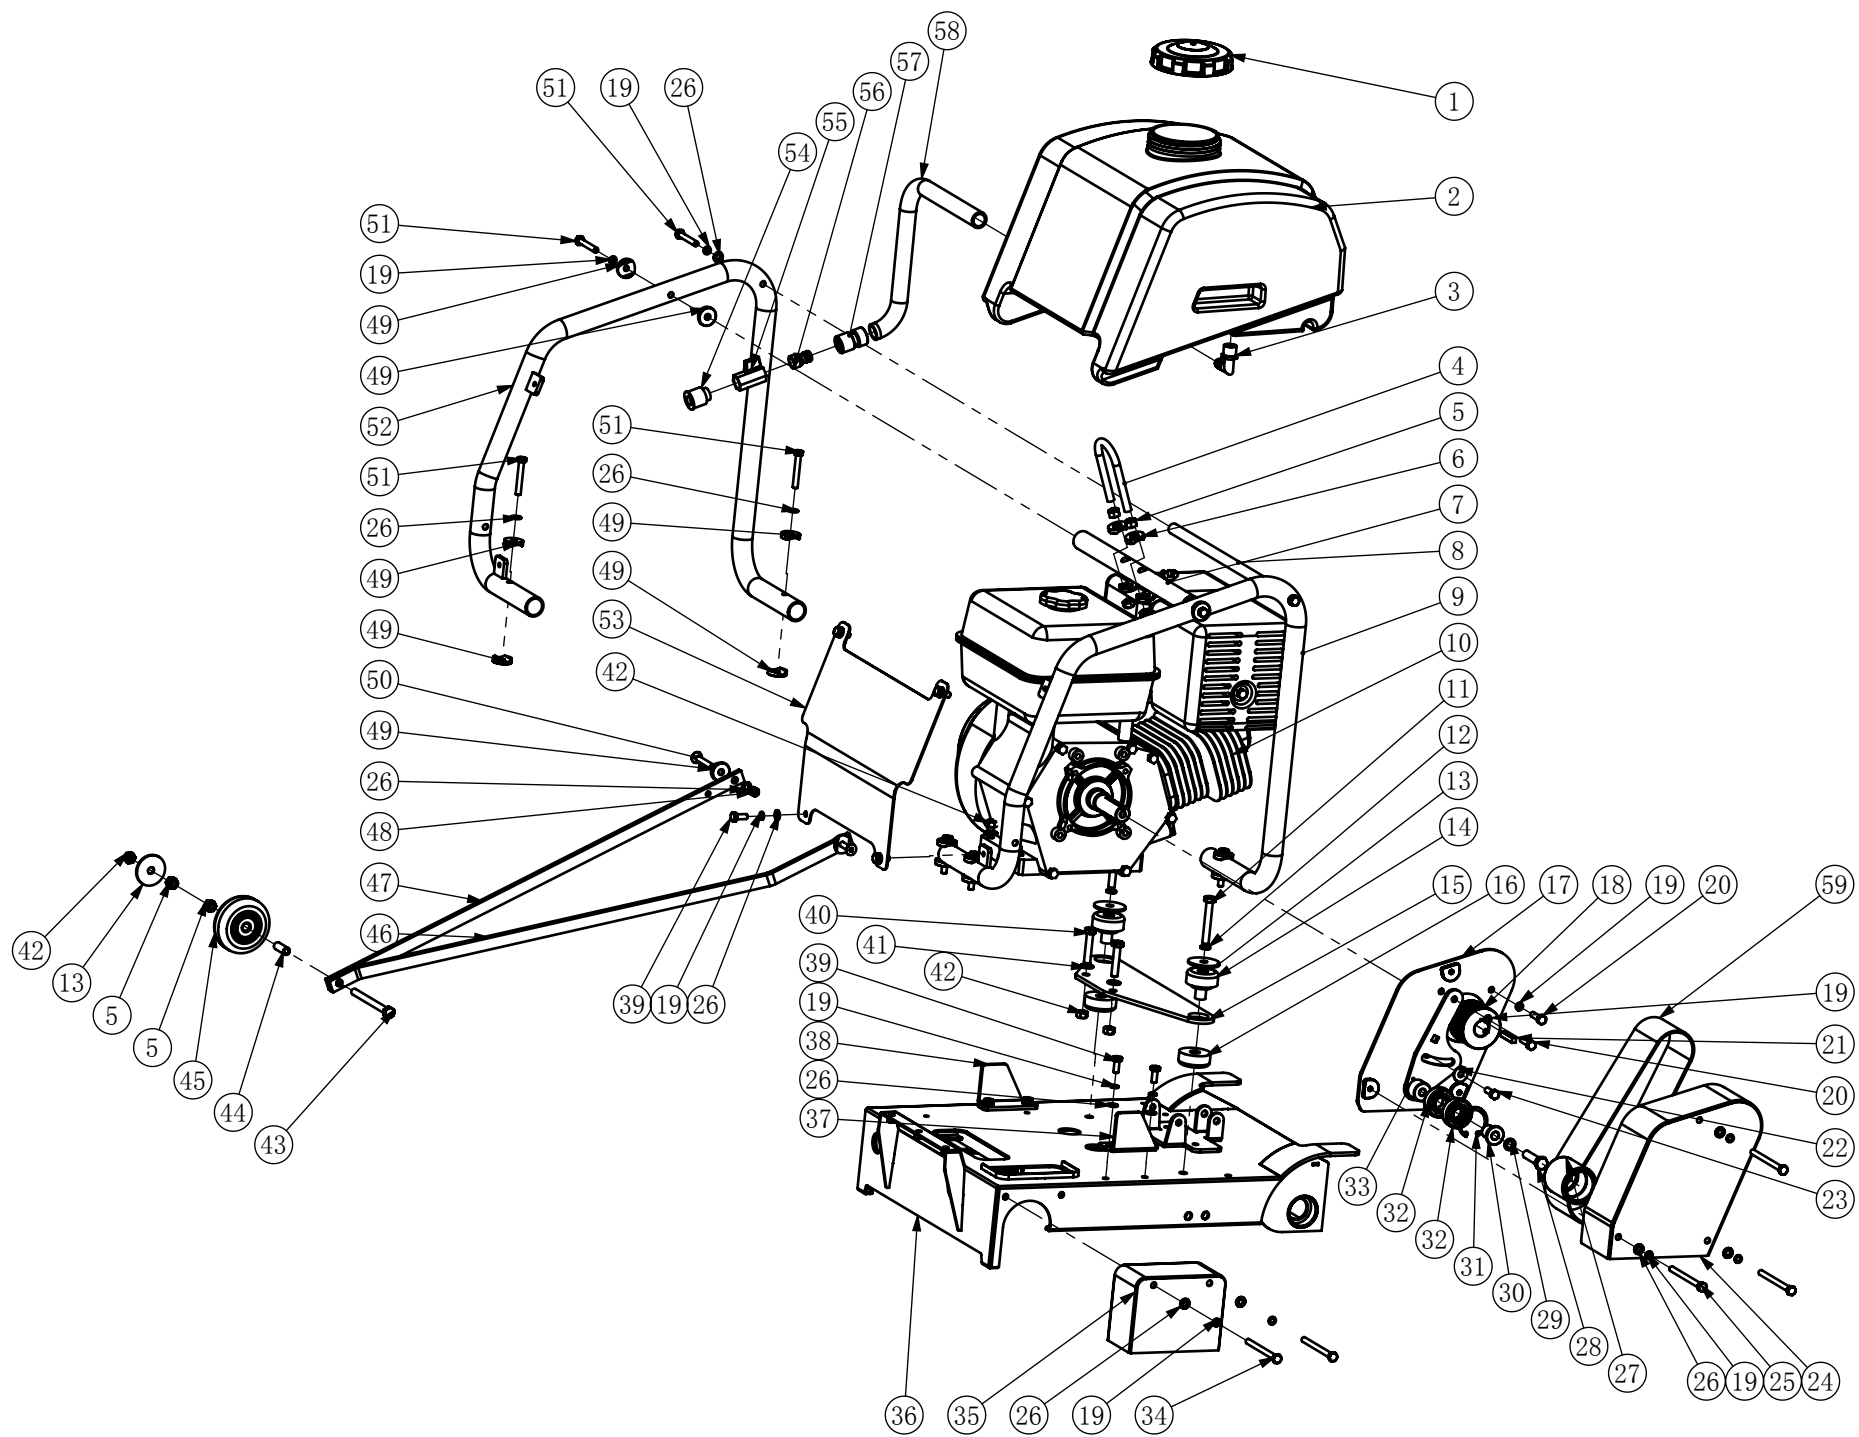


MOTOR & WATER TANK

Item	名称	Description	Part No.	QTY	Remark
1	水箱盖	WATER TANK CAP	0904-09100-4	1	
2	水箱	WATER TANK	0905-00006-1	1	
3	水箱接头	FITTING	0904-00007-1	1	
4	水箱支架吊钩	U-BOLT	0905-08005-1	1	
5	螺母	NUT M10	4100000	4	M10
6	水箱支架垫块2	WASHER	0905-08006-1	4	
7	水箱支架横梁	BAR. LIFTING BAIL	0905-08003-1	1	
8	水箱后横梁	BAR. TANK PIVOT	0905-08007-1	1	
9	水箱支架（左）焊接组件	ENGINE CAGE. LEFT	0905-11000-1	1	
10	发动机	ENGINE GX390	17390	1	GX390
11	螺栓	BOLT M10X70X26	3107026	2	M10X70X26
12	弹垫	SW M10	2100000	2	M10
13	大平垫	WASHER Φ11X50X3	1115003	3	Φ11X50X3
14	减震块（后）内	SHOCK ABSORBER (IN)	0905-00001-1	2	
15	发动机支板	ENGINE PLATE	0905-07001-2	1	
16	减震块（后）外	SHOCK ABSORBER (OUT)	0905-00014-1	2	
17	发动机护板总成	BELT GUARD PLATE	0905-06200-3	1	
18	发动机皮带轮	ENGINE PULLEY	0905-07004-1	1	
19	弹垫	SW M8	2080000	19	M8
20	螺栓	BOLT M8X30	3083000	2	M8X30
21	方头平键	KEY 8X40	12080740B	1	8X40
22	大平垫	WASHER M8X24	1082420	1	M8X24
23	螺栓	BOLT M8X25	3082500	1	M8X25
24	皮带罩总成	BELT COVER ASSY	0905-07200-1	1	
25	螺栓	BOLT M8X105X20	30810520	3	M8X105X20
26	平垫	WASHER M8	1080000	22	M8
27	张紧轮	TENSION ROLLER	0905-07002-1	1	
28	螺栓	BOLT M12X50X30	3125030	1	M12X50X30
29	弹垫	SW M12	2120000	1	M12
30	张紧轮安装轴	TENSION ROLLER SHAFT	0905-07003-1	1	
31	孔用弹性挡圈	CIRCLIP	9470002	1	Φ47
32	深沟球轴承	BEARING 6204	136204	2	6204
33	张紧轮固定调节板总成	TENSION ROLLER PLATE	0905-07100-1	1	
34	螺栓	BOLT M8X100X25	30810025	2	M8X100X25
35	防护罩总成	SHAFT GUARD	0905-03300-3	1	
36	底板总成	FRAME. WELDMENT	0905-02100-3	1	
37	锯片罩固定架（左）	SPADE, BLADE GUIDE (LEFT)	0905-02002-2	1	
38	锯片罩固定架（右）	SPADE, BLADE GUIDE (RIGHT)	0905-02001-2	1	
39	螺栓	BOLT M8X20	3082000	8	M8X20
40	螺栓	BOLT M10X50X30	3105030	2	M10X50X30
41	平垫	WASHER M10	1100000	6	M10
42	防松螺母	NYLON NUT M10	4100001	7	M10
43	螺栓	BOLT M10X120	31012000	1	M10X120
44	引导轮轴套	BUSHING	0905-00009-1	1	
45	引导轮	WHEEL	17129032	1	12X90X32


MOTOR & WATER TANK

Item	名称	Description	Part No.	QTY	Remark
46	引导杆加强杆	POINTER SUPPORT	0905-09002-2	1	
47	引导杆	POINTER	0905-09001-2	1	
48	防松螺母	NYLON NUT M8	4080001	2	M8
49	水箱支架垫块1	WATER TANK WASHER	0905-08004-1	16	
50	内六角沉头螺钉	SOCKET HEAD BOLT M8×55	708550005	2	M8×55
51	螺栓	BOLT M8X55X25	3085525	9	M8X55X25
52	水箱支架（右）焊接组件	ENGINE CAGE. RIGHT	0905-12000-1	1	
53	发动机前护板	FRONT COVER	0905-00019-1	1	
54	万能接头	FITTING	0904-09005-4	1	
55	开关	ROBINET MINU-LUX	0904-09004-4	1	
56	开关接头	ADAPT RAPIDE MALE	0904-09003-4	1	
57	快速接头	RACCORD PARIDE LAITON	0904-09002-4	1	
58	水管	WATER PIPE	0905-00005-1	1	

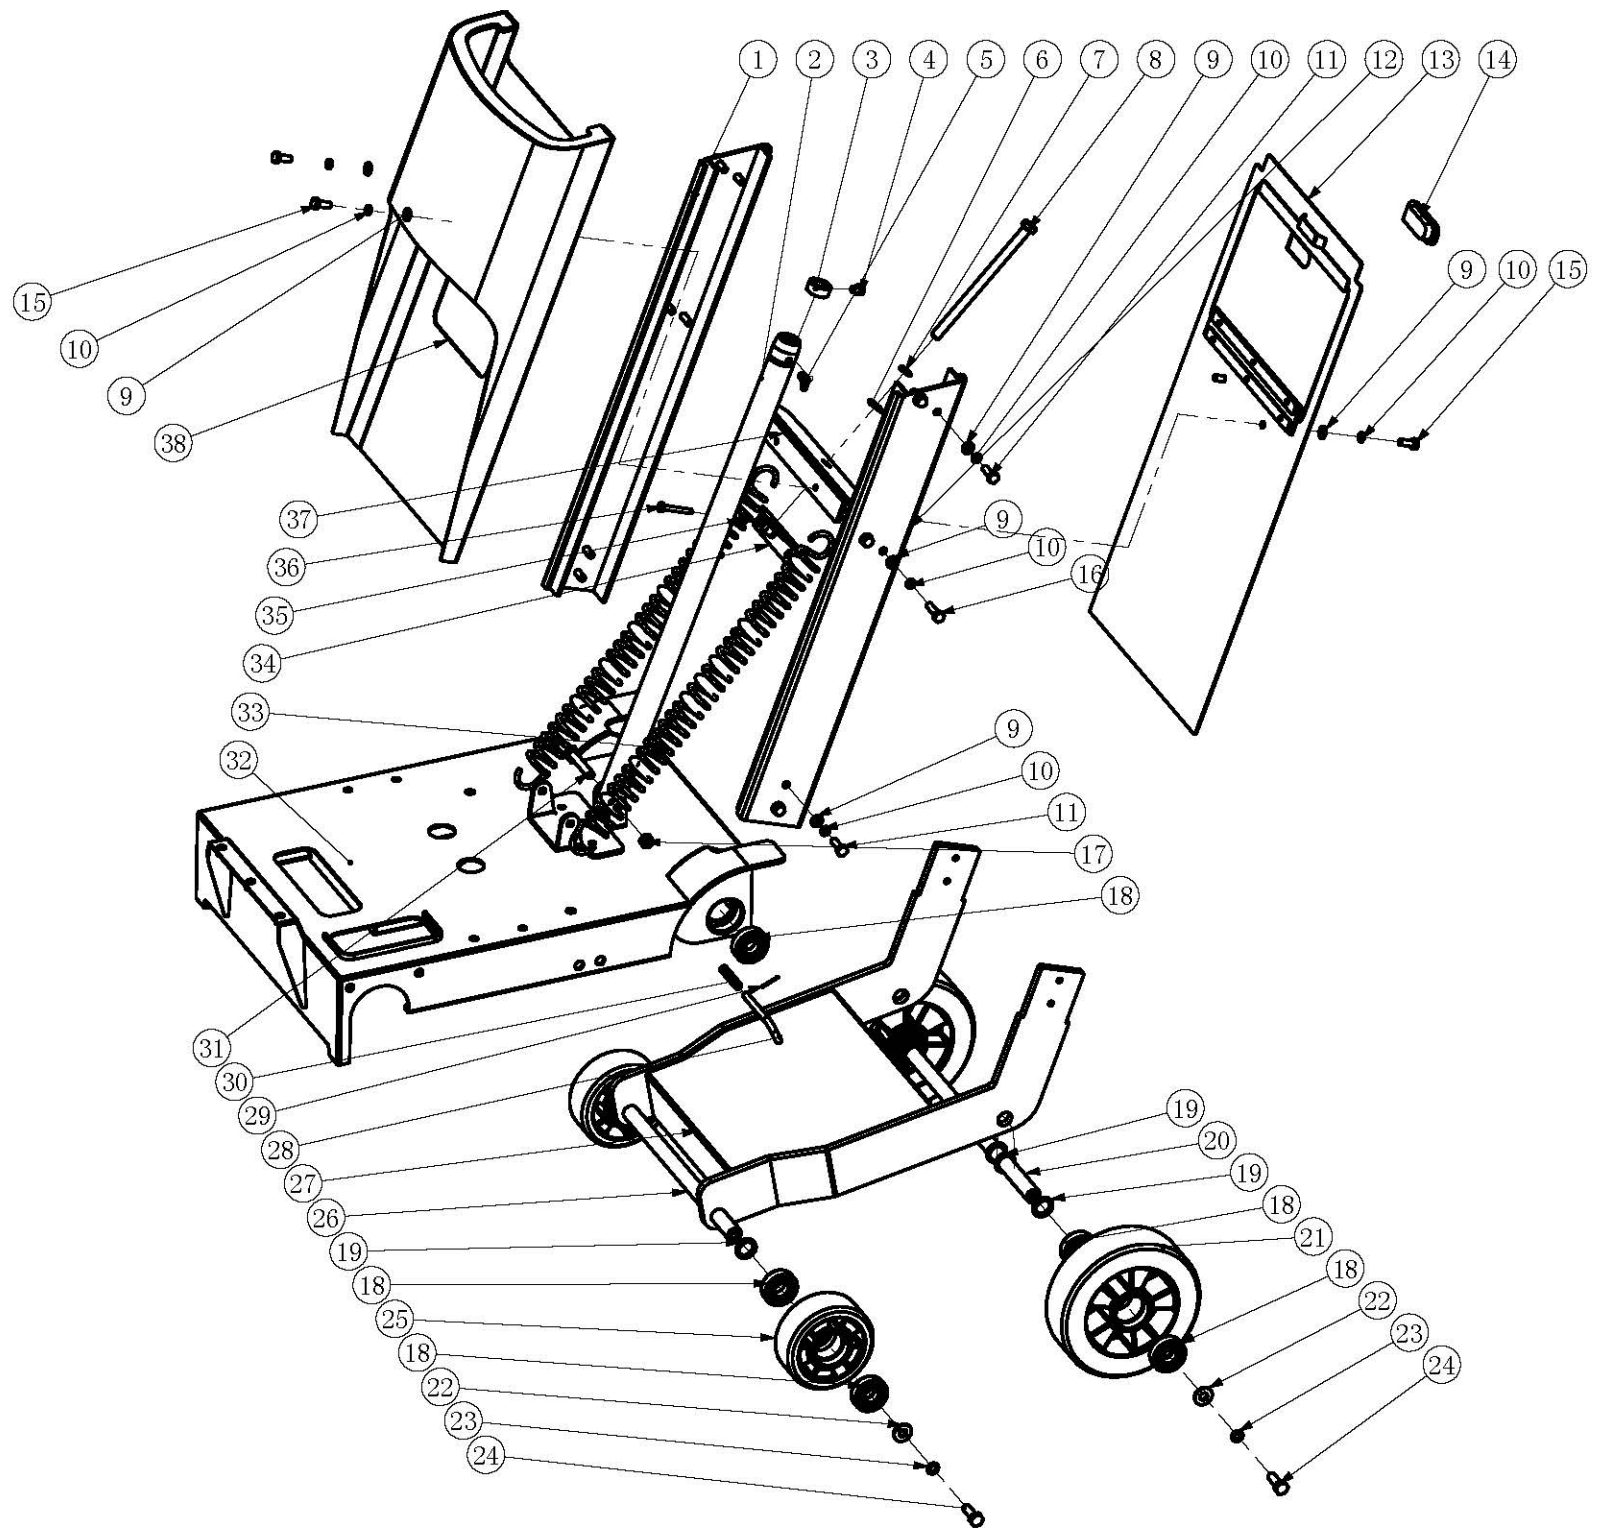

CRANK

Item	名称	Description	Part No.	QTY	Remark
1	立柱（右）总成	SIDE RIGHT	0905-04900-3	1	
2	调节杆总成	WELDMNT. NUT TUBE	0905-05100-3	1	
3	调节丝杠限位套	COLLAR. SCREW	0905-05002-1	1	
4	螺栓	BOLT M8×10	3081000	1	M8×10
5	注油嘴	GREASE NOZZLE	0905-00012-1	1	M8
6	平垫	WASHER M12	1120000	1	M12
7	弹垫	SW M12	2120000	1	M12
8	螺栓	BOLT M12X190	31219000	1	M12X190
9	平垫	WASHER M8	1080000	16	M8
10	弹垫	SW M8	2080000	16	M8
11	螺栓	BOLT M8X25	3082500	8	M8X25
12	立柱（左）总成	SIDE LEFT	0905-41000-3	1	
13	护板总成	COVER. WLDMNT. TOOLBOX	0905-04200-2	1	
14	工具锁	TOOLBOX LOCK	0905-00017-1	1	
15	螺栓	BOLT M8X20	3082000	4	M8X20
16	螺栓	BOLT M8X30	3083000	4	M8X30
17	防松螺母	NYLON NUT M10	4100001	1	M10
18	深沟球轴承	BEARING	136204	10	6204
19	平垫-前、后轮轴用	WASHER Φ20X28X3	0905-06005-2	8	Φ20X28X3
20	后轮轴	REAR WHEEL AXLE	0905-06002-1	1	
21	脚轮	WHEEL	174720060	2	47X200X60
22	大平垫	WASHER M10X25X2.5	1102525	4	M10X25X2.5
23	弹垫	SW M10	2100000	4	M10
24	螺栓	BOLT M10X30	3103000	4	M10X30
25	脚轮	WHEEL	174712450	2	47X124X50
26	前轮轴	FRONT WHEEL AXLE	0905-06001-1	1	
27	调节支架焊接总成	CARRIAGE	0905-04100-3	1	
28	制动销	BREAK PIN	0905-06003-1	1	
29	开口销	PIN	11162000	1	1.6×20
30	制动销弹簧	BREAK SPRING	0905-00011-1	1	
31	螺栓	BOLT M10X60X30	3106030	1	M10X60X30
32	底板总成	CHASSIS	0905-02100-3	1	
33	拉簧	SPRING	145540305	2	
34	拉簧支架总成	SPRING SUPPORT ASSY	0905-04400-3	1	
35	防松螺母	NYLON NUT M6	4060001	1	M6
36	内六角圆柱头螺钉	SOCKET HEAD SCREW M6X45X20	706452003	1	M6X45X20
37	护架固定板焊接总成	PLATE. RIVET	0905-04300-2	1	
38	前护板总成	COVER. CONSOLE	0905-04800-3	1	

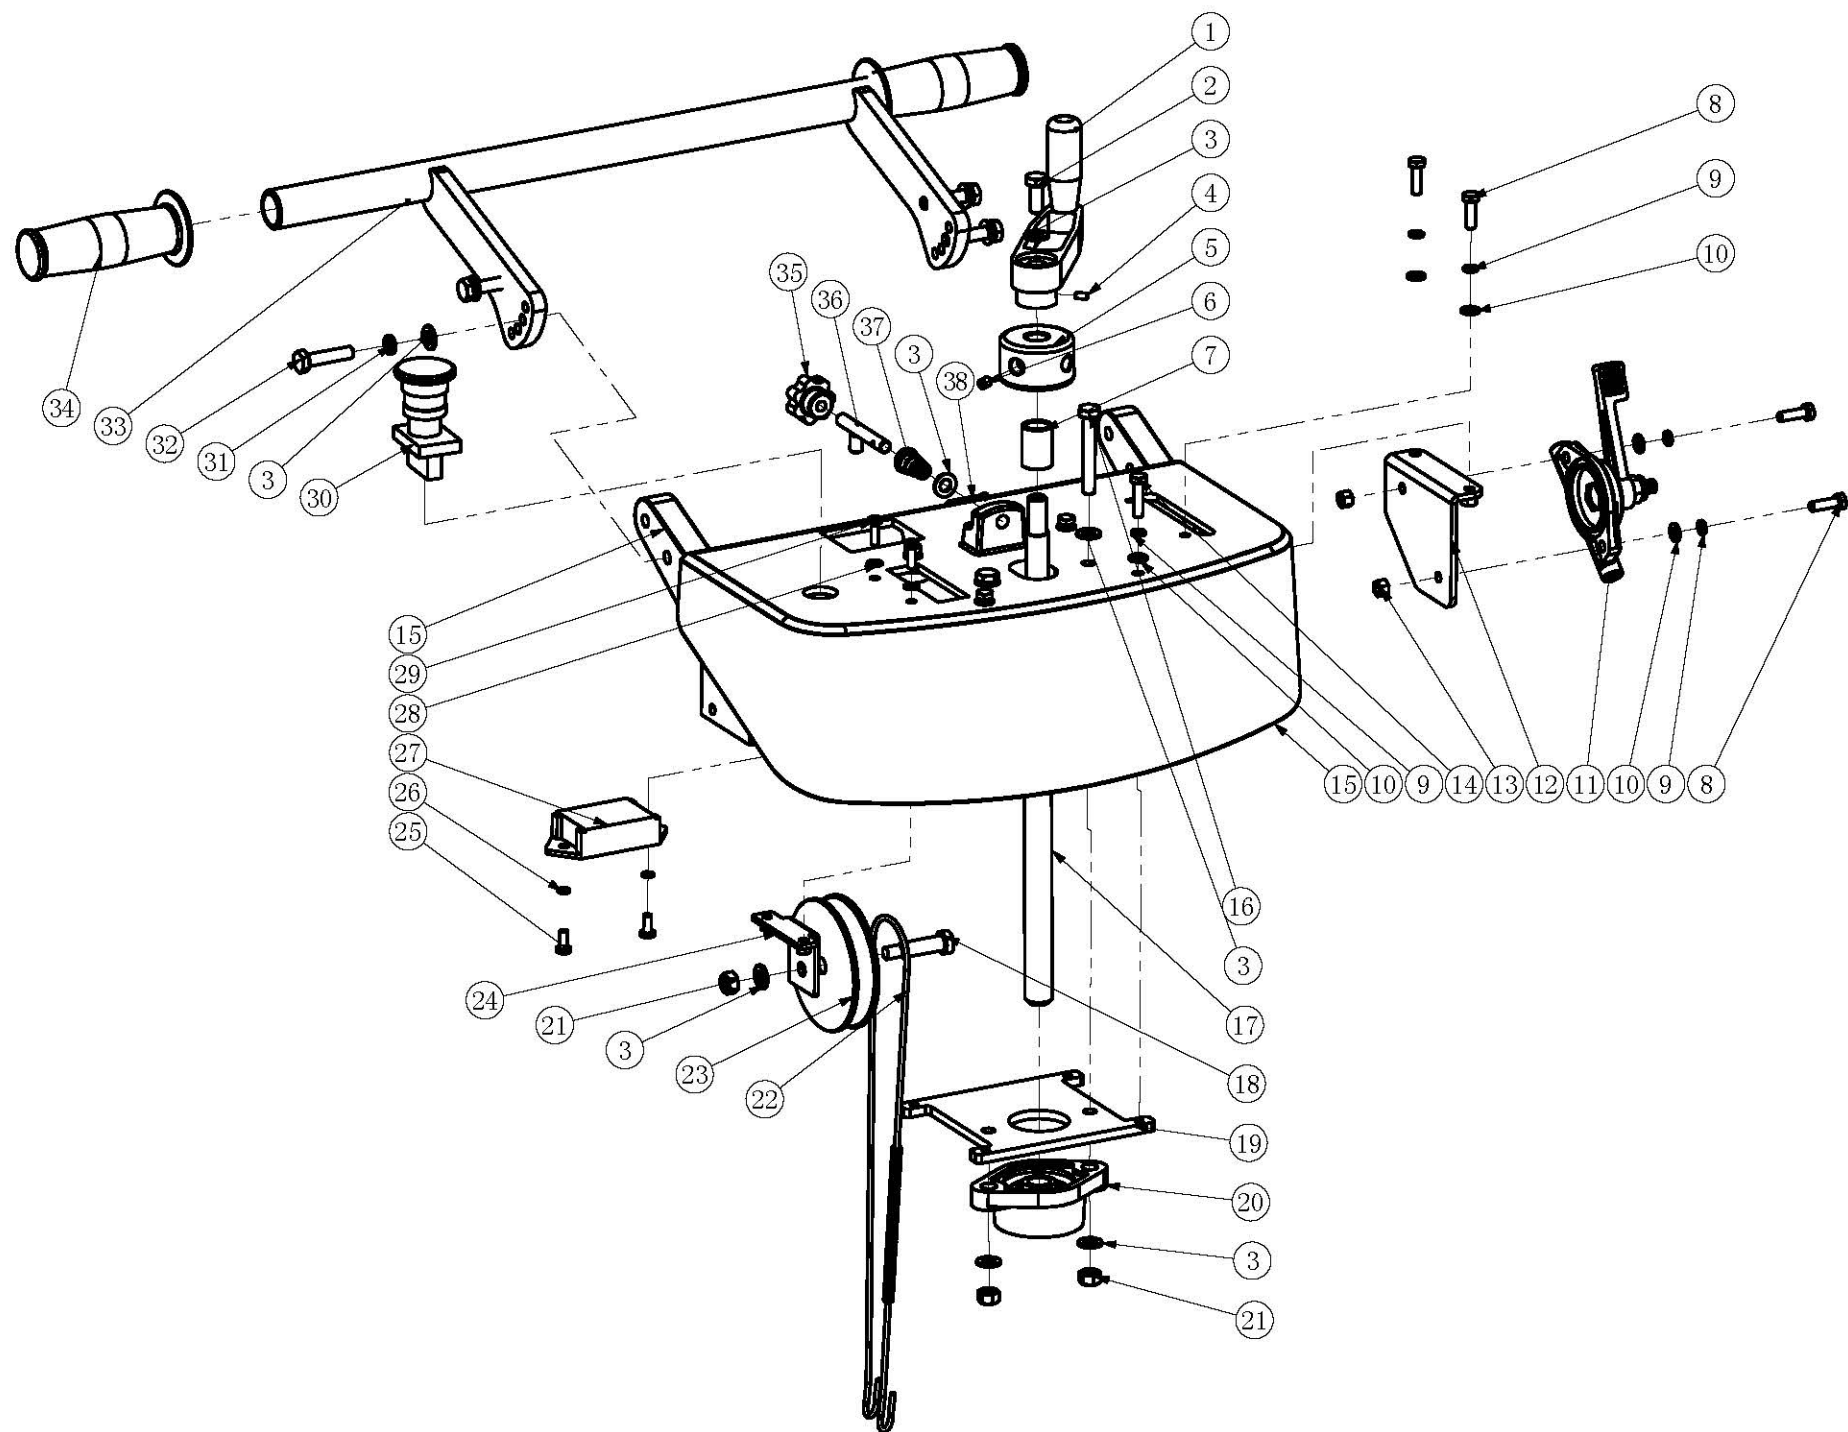

HANDLE

Item	名称	Description	Part No.	QTY	Remark
1	手轮	ROOLIRATAS	0905-00010-1	1	
2	螺栓	BOLT M8X20	3082000	1	M8X20
3	平垫	WASHER M8	1080000	11	M8
4	紧定螺钉	SCREW M4X8	7040804	1	M4X8
5	手轮座	HANDLE SUPPORT	0905-05006-2	1	
6	紧定螺钉	SCREW M6X8	706080004	1	M6X8
7	调节丝杠肩管	SPACER	0905-05003-1	1	
8	螺栓	BOLT M6X20	3062000	4	M6X20
9	弹垫	SW M6	2060000	8	M6
10	平垫	WASHER M6	1060000	8	M6
11	油控器把总成	THROTTLE LEVER ASSY	R66-002	1	
12	油控器安装架	THROTTLE LEVER SUPPORT	0905-00002-1	1	
13	螺母	NUT M6	4060000	4	M6
14	螺栓	BOLT M6X25	3062500	4	M6×25
15	操作面板	DECAL	0905-04004-1	1	
16	螺栓	BOLT M8X55X25	3085525	2	M8X55X25
17	调节丝杠	SCREW. ADJ.	0905-05001-1	1	
18	螺栓-刻度表盘用	BOLT M8	0905-00016-1	1	M8
19	调节丝杠轴承支架	BRACKET	0905-05004-2	1	
20	轴承	BEARING	13UCFLU202	1	UCFLU202
21	防松螺母	NYLON NUT M8	4080001	3	M8
22	刻度盘拉线	DEPTH GAUGE CABLE ASSY	0905-04006-1	1	
23	刻度盘	WHEEL. DEPTH GAUGE	0905-04005-1	1	
24	刻度盘支架总成	BRACKET. DEPTH GAUGE	0905-04700-3	1	
25	十字盘头螺钉	SUNK HEAD SCREW M5X12	7051201	2	M5X12
26	弹垫	SW M5	2050000	2	M5
27	转速表	HOUR METER	0905-00018-1	1	
28	平垫	WASHER M5	1050000	2	M5
29	十字槽盘头螺钉	SUNK HEAD SCREW M5X16	7051601	2	M5X16
30	急停开关	STOP SWITCH	0905-00015-1	1	
31	弹垫	SW M8	2080000	4	M8
32	螺栓	BOLT M8X35	3083500	4	M8X35
33	操作把总成	HANDLE	0905-04500-3	1	
34	把套	GRIP	17010000	2	
35	星型把手	WING BOLT	0905-05304-3	1	
36	定位销总成	DOWEL PIN	0905-05300-3	1	
37	塔簧	SPRING	0905-05005-2	1	
38	开口销2.5×25	SPRING PIN	11252500	1	